

GeoFinger



The fingerprint reader GeoFinger can work with GV-AS200 Controller and GV-ASManager to create a complete access control system. With the GeoFinger reader only, you can enroll and manage users through the supplied Manager Enroll Card and Delete Card along with MIFARE user cards.

KEY FEATURES

- Works with GV-AS200 Controller and GV-ASManager
- Standalone system without the need of cabling or PC
- Access by card plus fingerprint
- Fingerprint templates stored on the user card
- Wiegand output 26 bits

SPECIFICATIONS

Application	Indoor use only
Card Type	ISO14443A, MIFARE Class
RF Frequency	13.56 MHz
RF Distance	50 mm
DC Power	DC 7.5V~12V, Max 250mA
Interface	Wiegand 26
Operating Temperature	0~50 Degree C / 32~122 Degree F
Humidity	10%~90%
Dimension (H x W x D)	130.0 x 54.0 x 43.0 (mm) / 5.12 x 2.13 x 1.69 (in)